



R 7321

Kenlin Rite-Trak Furniture Guide

The "Drawer Guide" mounts "into" the end of the metal track that is mounted to the underside of the drawer. Screws secure the body of the guide to the back of the drawer.

The Drawer track Case guide or stop is placed into the steel drawer track at the front edge with the provided screw.

This Stop/Slide mates within the drawer Guide Track under the drawer, allowing the drawer slide & the guide to slide back and forth on the cabinet track runner.

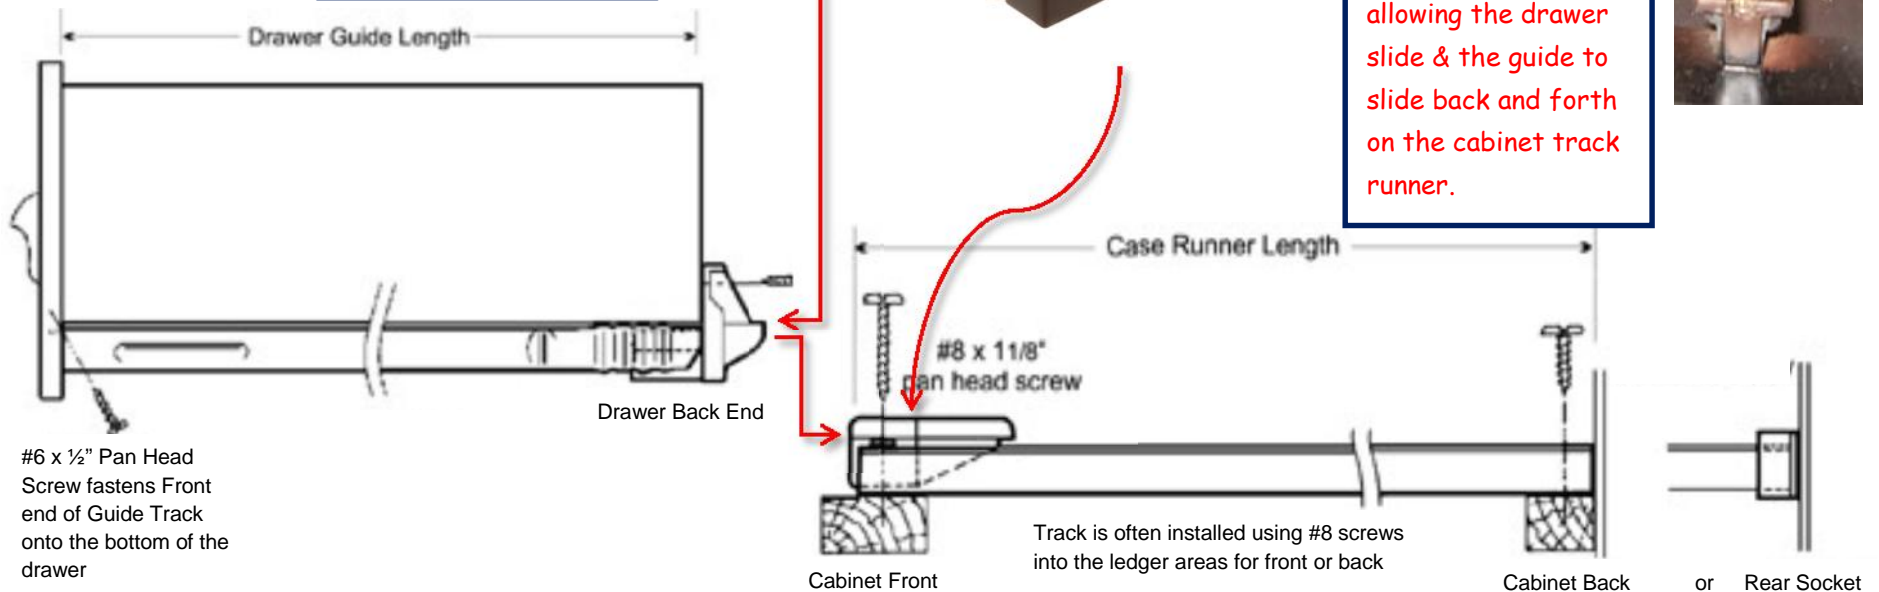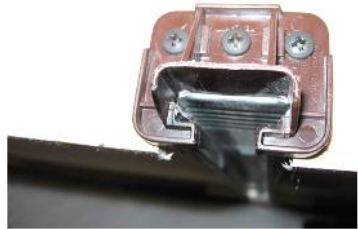

To remove the drawer: Firmly grab the drawer on both sides and slide out until it stops. Proceed to pull outward until the drawer track slips past the "stop".

After replacing the worn parts, align the drawer with the opening while making sure that the drawer track guide is mating with the stop and metal track. Press the drawer inward. Continue to press the drawer inward until it moves past the stop. You should feel the drawer slide smoothly on the track until it reaches the end.